
RX タブ
RX Tab

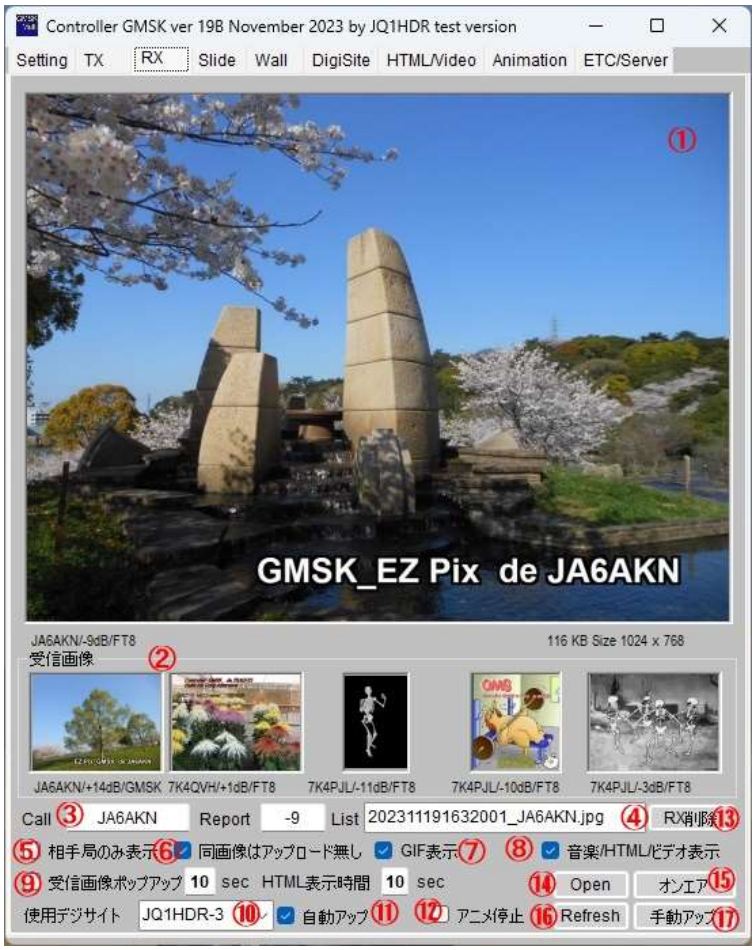

RX 画面を右クリック




RX タブのコントロール説明

① 受信画像
② 受信画像 5 枚
③ 受信局コールサイン　信号 SNR
④ 受信画像リスト　選択するとその画像を表示
⑤ ③の局のみ表示
⑥ 同じ画像はデジサイトにアップロードしない
⑦ GIF アニメを表示する
⑧ 音楽やビデオを受信したときに表示する
⑨ 受信時に画像をポップアップ表示する
⑩ 受信画像をアップロードするデジサイト
⑪ 受信時に自動的にアップロードする
⑫ GIF アニメの動作を停止する
⑬ 受信画像を削除する
⑭ 受信画像保存フォルダーを開ける
⑮ オンエアリストの表示
⑯ 受信画像をリフレッシュする
⑰ 手動でデジサイトにアップロードする
⑱ 受信拒否局設定を有効にする
⑲ 受信画像をクリップボードへコピーする
⑳ 自局のコールを受信したときに画像表示しない
㉑ 受信した画像の表示サイズを設定する
㉒ 同じ画像を受信したときに連続表示しない
㉓ ビデオや音楽を受信したときにダウンロードし保存する
㉔ 受信した音楽の再生時間を設定する
㉕ 受信した局へ受信レポートを送信する
㉖ 同じ画像、画像が無い、添付音楽、ビデオのレポートを送る
㉗ 受信記録を開く
㉘ VARI Front では GMSK のみを受信



Right Click on the RX Image

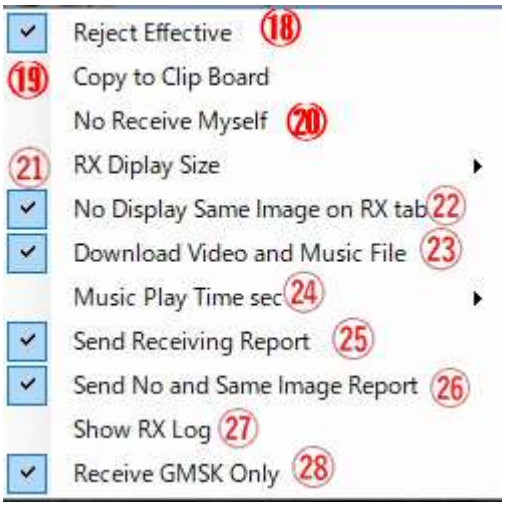

RX tab control description

① Received image
② 5 received images
③ Receiving station call sign signal SNR
④ Received image list: Select to display that image
⑤ Display only stations from ③
⑥ Do not upload the same image to digital sites
⑦ Display GIF animation
⑧ Display when music or video is received
⑨ Display an image as a pop-up when receiving
⑩ DigiSite to upload received images
⑪ Automatically upload when received
⑫ Stop the GIF animation from working
⑬ Delete the received image
⑭ Open the received image storage folder
⑮ On-air list display
⑯ Refresh the received image
⑰ Manually upload to DigiSite
⑱ Enable reception rejection station setting
⑲ Copy the received image to the clipboard
⑳ Do not display an image when receiving a call from your own station
㉑ Set the display size of the received image
㉒ Do not display consecutive images when receiving the same image
㉓ Download and save videos and music when received
㉔ Setting the playback time of received music
㉕ Send the reception report to the receiving station
㉖ Same image, no image, attached music, Video, send report
㉗ Open reception record
㉘ VARI Front only receives GMSK