


Setting タブ

Setting Tab



Setting タブのコントロール説明

- ① 自局のコールサイン
- ② 運用周波数
- ③ 使用言語
- ④ 受信開始
- ⑤ 起動後自動的に受信状態にする
- ⑥ EZPix を使用する
- ⑦ FT8 用のプログラム設定
- ⑧ モード FT8 は設定済、GMSK モードを使用する場合はチェック
- ⑨ 表示時間を UTC にする
- ⑩ 日本語時にマクロ展開は英語とする
- ⑪ 受信画像の保存枚数
- ⑫ 画像受信時に RX タブへ移動
- ⑬ HTML やビデオを受信する
- ⑭ HTML やビデオを送信する
- ⑮ 一台の PC で 2 個の Controller GMSK を起動する場合
- ⑯ RX で GIF を受信する
- ⑰ GIF をデジサイトにアップロードする。 大きさ制限をかける場合、指定上の GIF は静止画となる
- ⑱ ピーナッツの ON/OFF を制御
- ⑲ FT8 のチューニング
- ⑳ FT8 の CQ を画像として受信
- ㉑ ビデオや音楽ファイルをダウンロードする
- ㉒ デジサイトの登録名称
- ㉓ サーバー設定を保存する
- ㉔ デジサイトにアップロードするサイズを指定
指定しない場合は受信したサイズ
- ㉕ サーバー設定が正しいかどうかチェックする
- ㉖ 送信画像のサイズ
- ㉗ マスターの設定
- ㉘ 送信画面のリセット
- ㉙ 設定項目の表示
- ㉚ デジサイトをアップロードごとに再読み込み
させない場合にチェック
- ㉛ Animation タブにいろいろなファイルを受信する。

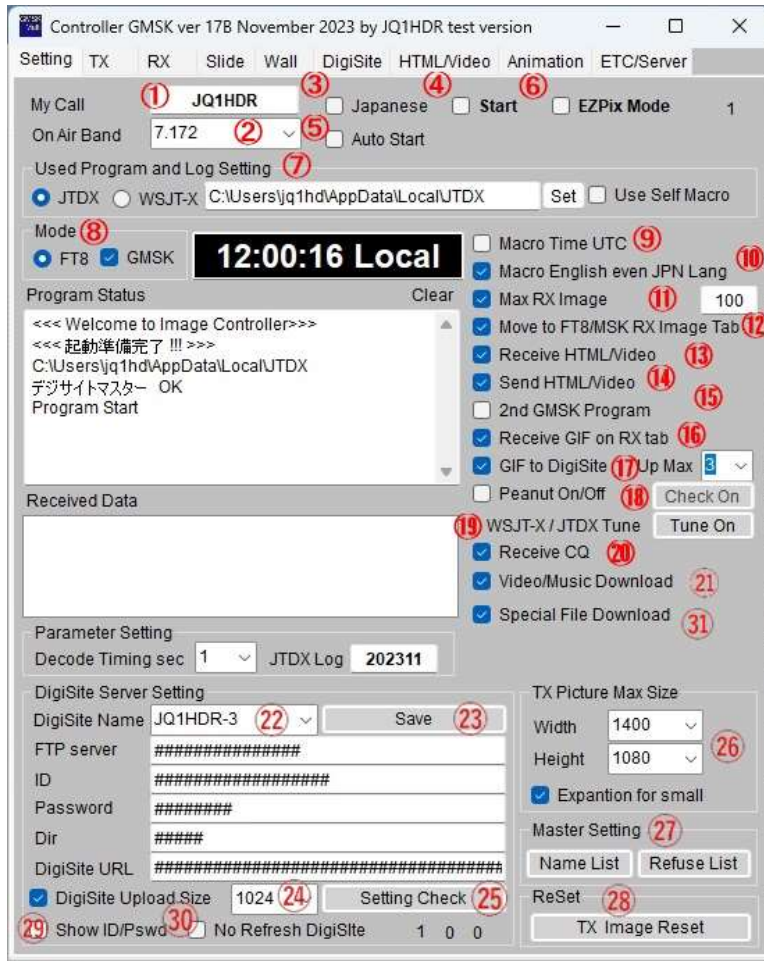

TX tab control description

- ① Your callsign
- ② Operating frequency
- ③ Language used.
- ④ Start receiving.
- ⑤ Automatically start receiving.
- ⑥ Use EZ Pix
- ⑦ Program settings for FT8
- ⑧ Mode FT8 is already set, check if using GMSK mode
- ⑨ Set display time to UTC
- ⑩ When using Japanese, macro expansion is in English.
- ⑪ Number of saved received images
- ⑫ Move to RX tab when receiving image
- ⑬ Receive HTML and videos
- ⑭ Send HTML or video
- ⑮ When starting two Controller GMSK on one PC
- ⑯ Receive GIF via RX
- ⑰ Upload the GIF to the digital site. If size restrictions are applied, the specified GIF will be a still image.
- ⑱ Control peanut ON/OFF
- ⑲ FT8 tuning
- ⑳ Receive FT8's CQ as an image
- ㉑ Download video and music files
- ㉒ Registered name of digital site
- ㉓ Save server settings
- ㉔ Specify the size to upload to the digital site
If not specified, the received size
- ㉕ Check whether the server settings are correct
- ㉖ TX image size
- ㉗ Master settings
- ㉘ Reset the sending screen
- ㉙ Display of setting items
- ㉚ Reload the digital site every time you upload it
Check if not allowed
- ㉛ Receive any file on the Animation tab.