TX タブ

TX Tab



TX 画面を右クリック



TX タブのコントロール説明

① 送信画像ン

② Msg1、Msg2、Msg3, Msg4, Report 画面上に記載する文字の位置をドラッグで設定。マウスホィールで文字の大きさを設定

③ 記載するメッセージを選択

④ メッセージ内容 マクロで記載

⑤ マクロを設定

⑥ 記載するメッセージを選択

⑦ 使用したフォントを保存、読込

⑧ メッセージごとのフォントを設定する

⑨ スライドを送信画像にする

⑩ 壁紙を送信画像にする

⑪ Call を押すと相手局のコール、レポート、名前を読み込む

⑫ 受信画像の貼り付け 位置はドラッグで マウスホィールで大きさを調整

⑬ 複数の受信画像を貼り付け

⑭ 左クリックで画像を読み込む 右クリックでドラッグアンドドロップ

⑮ 読み込んだ画像をトリミングする

⑯ 編集した画像をサーバーに転送する

⑰ 転送時にそうし画像をポップアップ

⑱

⑲ 貼り付けロゴ ドラッグアンドドロップで取り込み

⑳ ＱＳＬデータを貼り付ける

㉑ ＱＳＬカードイメージにする

㉒ ＱＳＬイメージの登録名称

㉓ ＱＳＬイメージの呼び込み、登録

㉔ FT8 で送信

㉕ 緊急停止

㉖ 送信画像をクリップボードへ「コピー

㉗ クリップボードから画像を取り込む

㉘ レポートをポップアップしない

㉙ レポートを表示する

㉚ QSL 作成データを作成する

㉛ RX 貼り付け画像にクリップボード画像を取込み


㉜ メッセージを選ぶ（４種類登録可能）

㉝ ロゴ用フォルダーを開ける

㉞ ㉟ 画像を回転させる



Right Click on the TX Image

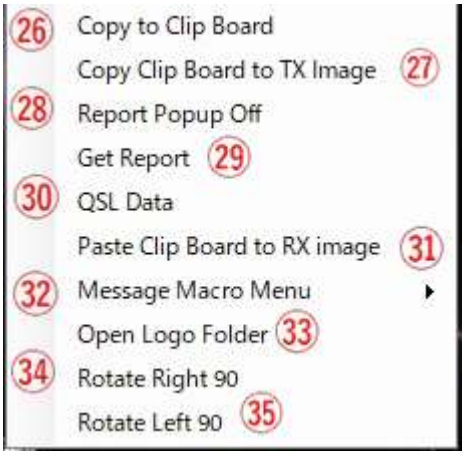

TX tab control description

① Sending image

② Msg1, Msg2, Msg3, Msg4, Report Drag to set the position of the characters to be written on the screen. Set font size with mouse wheel

③ Select the message to write

④ Message content: Described in macro

⑤ Set macro

⑥ Select the message to write

⑦ Save and load the font used

⑧ Set the font for each message

⑨ Make slides into sending images

⑩ Set the wallpaper as the image to send

⑪ Press Call to read the call, report, and name of the other station.

⑫ Paste the received image. Drag the position and adjust the size using the mouse wheel.

⑬ Paste multiple received images

⑭ Left click to load the image Right click to drag and drop

⑮ Trimming the loaded image

⑯ Transfer the edited image to the server

⑰ Pop up the image when transferring

⑱

⑲ Paste logo: Import by drag and drop

⑳ Paste QSL data

㉑ Make it into a QSL card image

㉒ Registered name of QSL image

㉓ Calling in and registering QSL image

㉔ Send via FT8

㉕ Emergency stop

㉖ Copy the sent image to the clipboard

㉗ Import images from clipboard

㉘ Do not pop up the report

㉙ View report

㉚ Create QSL creation data

㉛ Import clipboard image to RX pasted image

㉜ Select a message (4 types can be registered)

㉝ Open the logo folder

㉞㉟ Rotate the image